
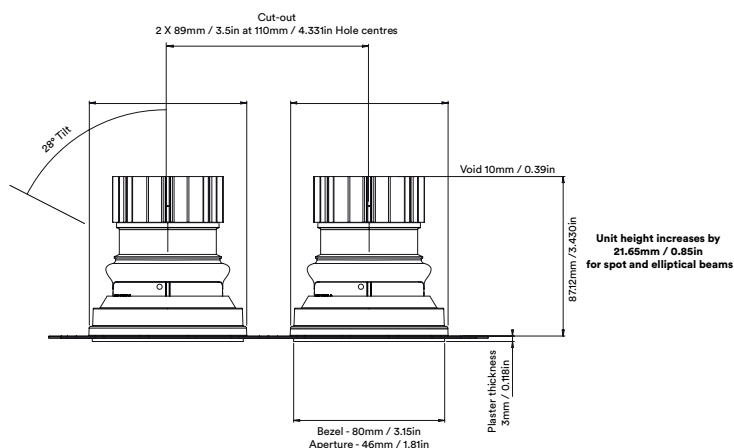
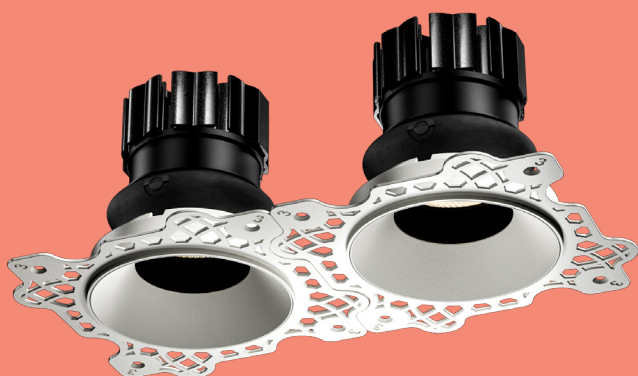



# fade twin origin installation

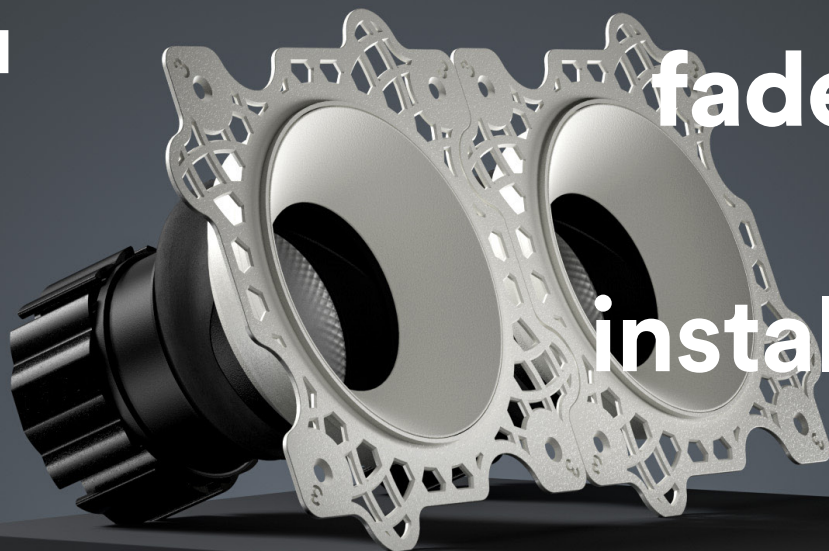

### How to Install

- Cut hole in ceiling as per above cut-out; attach first fix plaster plate.
- Wire luminaire cable to Orluna certified driver, ensuring correct polarity (red to positive terminal [+] and black to negative terminal [-]);
- With mains supply switched off, connect driver to mains supply (to avoid damaging the luminaire, do not hot-wire);
- Press the luminaire into plaster frame, ensuring  $\text{Ø}250\text{mm}$  around luminaire and driver is left clear of insulation.

### Luminaire Details

Cut-out	2 x 89mm at 110mm Hole Centres	Class	III
Recess Depth	85mm	IP Rating	IP54/IP65
Clearance	$\text{Ø}250\text{mm}$	IP Zone	Zone 1
Fixing Method	Ball catch	Material	Aluminium ADC12
Min Ceiling Thickness	5mm	Cable type	2 Core 0.75mm <sup>2</sup>
Max Ceiling Thickness	28mm	Cable Length	300mm
Max Driver Distance	20m	Bezel Temp	F Rated